

# GETTING Started

## WITH YOUR FRIGIDAIRE GALLERY DISHWASHER



### BEFORE YOU START



#### Set up your dishwasher

Make sure your top rack, bottom rack and silverware basket are in place prior to operating the dishwasher. Check out your Use & Care Guide.

#### Fill Rinse Aid dispenser

Rinse aid greatly improves drying and reduces water spots. Twist off the rinse aid dispenser cap and fill until the indicator reaches full, then replace cap.

#### If installed with a garbage disposal


Ensure the knock-out plug has been removed so the dishwasher can properly drain. See Installation Instructions for further details.

### YOU'RE IN CONTROL



#### Your dishwasher controls

To begin using your dishwasher, select one of the cycle options from the control panel. The Wash and Dry settings can then be adjusted based on the cycle chosen. Indicator lights will illuminate as each cycle or option is selected.

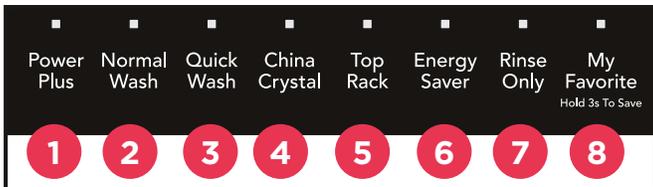

1. POWER PLUS\* for pots, pans, casseroles and dinnerware having lightly to heavily soiled loads.
2. NORMAL WASH\* for lightly to heavily soiled loads.
3. QUICK WASH (34 minutes) for lightly soiled loads only.
4. CHINA CRYSTAL for lightly soiled China, Crystal or other delicate items.
5. TOP RACK\* for small loads in the upper rack only that are lightly to heavily soiled.
6. ENERGY SAVER\* for lightly soiled loads.
7. RINSE ONLY for rinsing dishware that will be washed later.
8. MY FAVORITES program preferred cycle and options to a one touch control. See Use & Care instructions for details.


\* Cycle uses soil sensing feature to determine best wash performance.

### REMEMBER

- Before starting your dishwasher, run warm/hot water from the kitchen faucet for optimal performance.
- To add an item, press START again immediately before closing the door to resume the cycle.
- Load rack so large items do not block the spray arm or detergent dispenser.



9. START CANCEL to start or cancel cycle. Door must be closed within 4 seconds of pressing START to start a cycle.
10. STATUS WINDOW will display remaining time in cycle, delay time setting or "close door" reminder.
11. INDICATOR LIGHTS provide cycle status information showing delayed (delay start), clean (clean non-sanitized) and sanitized (clean with sanitized option).

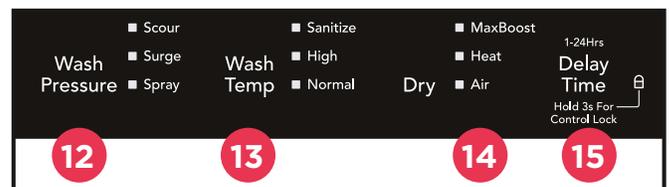

12. WASH PRESSURE provides the choice of Scour (extra heavy soil), Surge (heavy to normal soil) or Spray (light soil).
13. WASH TEMP provides the choice of Sanitize, High or Normal water temperature.
14. DRY provide the choice of MaxBoost (extended dry time), Heat (normal dry time) or Air (air dry only).
15. DELAY TIME sets a delayed starting time to begin the wash cycle.

## QUICK CARE



### A little love goes a long way


Quick ongoing care keeps your dishwasher working great for years to come!

### Be gentle

Clean interior with warm water and mild soap using dishcloth or sponge. To keep the exterior clean and shiny, use Frigidaire ReadyClean™ Stainless Steel cleaner wiping with the grain.

Empty the glass trap.

1. Press down on the center of the wash arm while rotating the glass trap handle clockwise.
2. Lift out wash arm and glass trap.
3. Empty the glass trap.
4. Reinstall the glass trap (turning counterclockwise) and wash arm back into place.
5. Verify that the glass trap and wash arm are snapped in place to avoid damage!

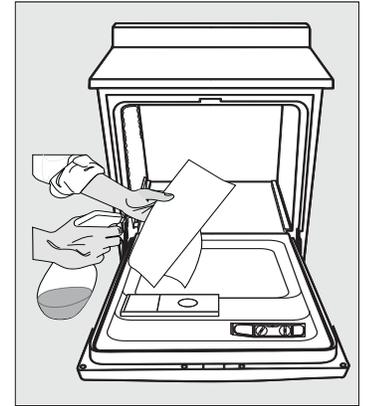

## FAQs

### Why won't my dishwasher start?

To start a new wash cycle or resume a cycle after adding a dish, press the START button and immediately close the dishwasher door. If the door remains opened for more than 4 seconds after pressing the button, the unit will not start. Press the START button again and close the door immediately.

### What do I do if my dishes are not as dry as expected?

If your dishes are not as dry as you like, try using a rinse aid, which helps with drying and cleaning performance. These products help eliminate spots and residue. You can also try changing the DRY setting on your dishwasher to MaxBoost for an extended dry time.

### Why aren't my dishes clean?

The proper loading of racks and silverware basket improves cleaning and drying performance. See Use & Care Guide for proper loading procedures.




**Find more troubleshooting tips in the back of your Use & Care Guide, on our website under FAQs or view our Frigidaire videos on [www.youtube.com/Frigidaire](http://www.youtube.com/Frigidaire).**

## LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new dishwasher.

**Look for the Photoregister<sup>SM</sup> icon on your registration card.**

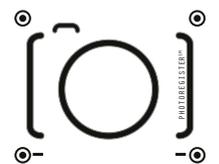

**WE ARE**  
*here*  
**FOR YOU**



Have a question?



Want help?



Need service?

**1 (800) 374-4432/frigidaire.com**

**1 (800) 265-8352/frigidaire.ca**

**owner support**

