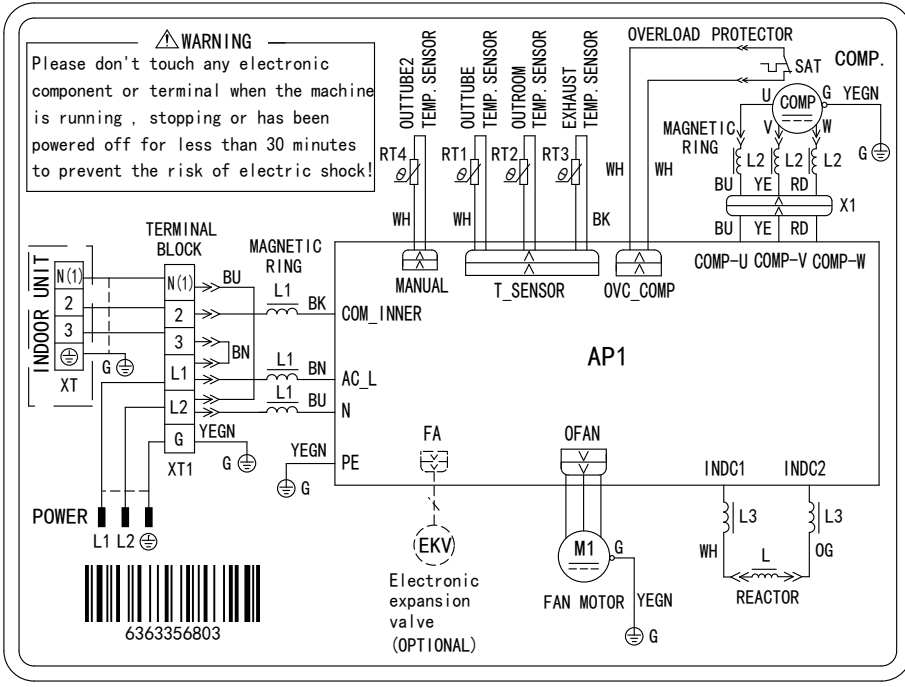
WARNING
Please don't touch any electronic component or terminal when the machine is running , stopping or has been powered off for less than 30 minutes to prevent the risk of electric shock!
OUTTUBE2 TEMP. SENSOR
OUTTUBE TEMP. SENSOR
OUTROOM TEMP. SENSOR
EXHAUST TEMP. SENSOR
OVERLOAD PROTECTOR
SAT
COMP.
COMP
U
V
W
G
YEGN
MAGNETIC RING
L2
BU
YE
RD
X1
RT4
RT1
RT2
RT3
WH
BK
MANUAL
T_SENSOR
OVC_COMP
COMP-U COMP-V COMP-W
TERMINAL BLOCK
MAGNETIC RING
INDOOR UNIT
N(1)
2
3
XT
L1
L2
XT1
BN
L1
BK
COM_INNER
AC_L
N
PE
AP1
FA
OFAN
INDC1
INDC2
L3
OG
REACTOR
POWER
EKV
Electronic expansion valve (OPTIONAL)
M1
FAN MOTOR
6363356803